

- Wide drying area
- Allows users to dry hands more naturally and comfortably.
- Air Speed Adjustment
- On/Off Heater Switch
- Standby Power: Less than 0.5W
- Blue action light indicating sensor range and maximum drying efficiency.
- 3 years warranty
- Small footprint
- Easy to service



Ordering information

Model No	Description	UPC Code
C-01-Slender/342	White	628235093422
C-01-Slender/345	Stainless	628235082312

















2-25 Boul Maisonneuve St-Jerome, QC J5L 0A1 Tel: +1 450-432-5946 Tel: +1 855-555-0303 info@comaccorporation.com www.comaccorporation.com

SÈCHE-MAINS

Specification

1.2mm White Powder Coated Steel Material

Contemporary curved design | Patented high-flow dual air outlets Features

250-500W Brush Type: Motor

Dual Ball Bearings | 15,000-26,000 RPM | 95°C auto reset overload

240V, 50Hz, 1000W, 4.17A **Power Use**

Sound Level 75db (+/- 3)

Drying time Less than 15 seconds

DP Rating IP 23 Element 500W

> 85°C auto resetting thermostat | 105°C auto reset safety cut off Heater

Speed: 35-70m/s (adjustable) | Temp: Ambient +25°C Warm Air

60 sec power cut off, auto reset Protection

Infrared Automatic - 152mm +/-20mm preset Sensor/Range

Blue LED indicates operation/range


2 SS theft resistant hex drive screws (hex key supplied) **Case Security**

Net Weight 3.8kg

Dimensions 276mmW x 216mmH x 100mmD

> Unit can be hard wired by electrician or used with cord and plug provided Note

1.2mm White Powder Coated Steel Material

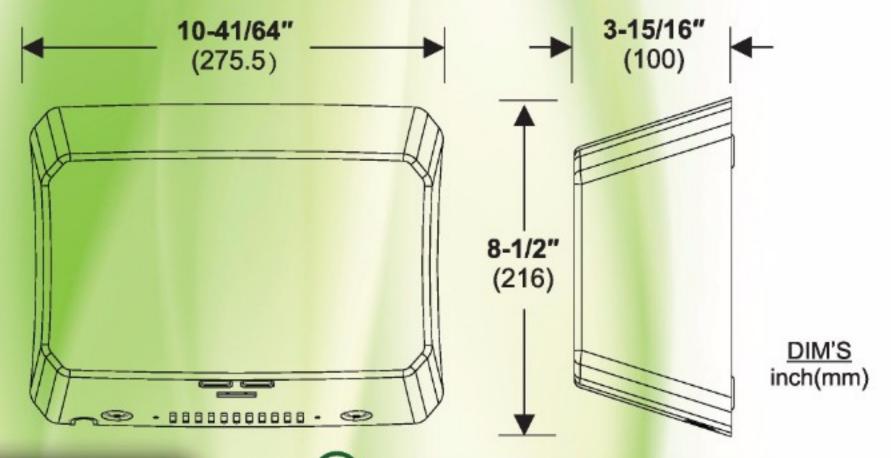

















Installation

Installation must be performed by qualified personnel. Hand dryer must be grounded.

Installation

- Fix the position card on the wall. Suitable height for hole "D" is 130 cm (50") from ground.
- Drill 4 holes(A. B. C. D. 8 mm (5/16") diameter: 35 mm (3/8") depth.)
- Take off the mounting instruction sheet. Hammer dowels into 4 holes.
- Remove the housing from the base plate; fix the base plate firmly on to the wall.
- 5. Connections:
- A. Connect the live wire (colored red or brown) to the terminal block marked L
- B. Connect the neutral wire (colored black or blue) to the terminal block marked N
- C. Connect the ground wire (colored green and yellow) to the green screw marked "E)".
- Attach housing back to base plate.

Operation

Shake excess water from hands. Place hands under dryer to start operation. Place hands under dryer. Rúb hands lightly & rapidly. Dryer stóps automatically.

-IMPORTANT: After turning on electrical power, it takes up to 5 Seconds till hand dryer be ready to operate.

Cleaning & Maintenance

Easy to maintain. If the surface is dirty or dusty just wipe to clean.

Regularly clean exterior surfaces and wash with mild soap.

Remove accumulated dust from air inlet areas.

Ensure that infrared sensor lens is clean and unobstructed.

Once per year or more frequently if dryer is installed in a dusty, greasy, or heavy use


Environment:

IMPORTANT: Turn off the breaker at electrical panel or source.

Remove cover. Remove accumulated dust from mechanism. Replace cover and restore power.

LIMITED THREE-YEARS WARRANTY

Should this product fail to perform satisfactorily due to a defect or poor workmanship within THREE-YEARS from the date of purchase, return it to the place of purchase and it will be repaired, free of charge, incidental or consequential damages are excluded from this warranty.

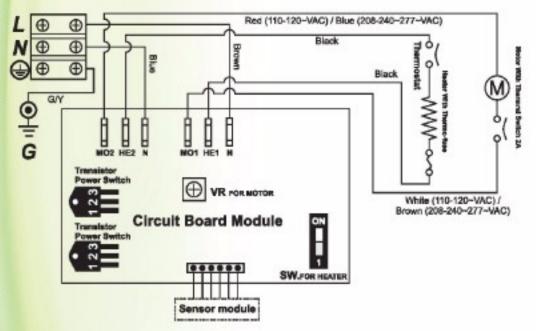

General safety information

AWARNING

Disconnect power before installation or servicing.

AWARNING

This product intended for installation by a qualified service person. Use AWG NO. 12 solid conductor for wiring.

AWARNING

All units must be supplied with a 3-wire service. The ground wire must be connected to the dryer's backplate.

A DANGER

Failure to properly ground unit could result in severe electrical shock and/or death.

NOTE: Do not install dryer over washbasin.

Distance from bottom edge of dryer to floor: Men47"(119cm) Women44"(112cm) Children 8-10 years35"(89cm) Children 11-13 years......38"(97cm) Children 14-16 years44"(112 cm) Disabled36"(91cm)













info@comaccorporation.com www.comaccorporation.com




Wiring

Important Information

This product falls within the scope of the Waste Electrical & Electronic Equipment Directive 2002/96 EC. (WEEE)


Note:

This product should not be disposed of with household waste. Please recycle where facilities exist. Check with your local Authority for recycling advice.

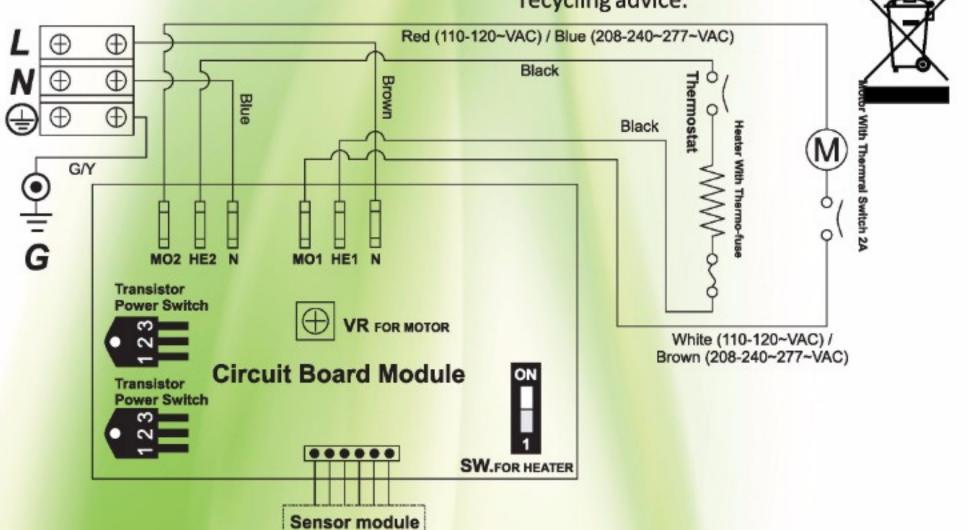

Connect Description

- Secure the base plate on the wall.
- 2- Use only 1/2" trade conduit.
- 3- Connections:
- A. Connect the red (or brown) live wire to the terminal block marked "L".
 - B. Connect the black (or blue) neutral wire to the terminal block marked "N".
 - C. Connect the green and yellow (or green, note bare earth wires should be sleeved with green and yellow or green sleeving) earth wire colored to the ground washer marked with the earth symbol.

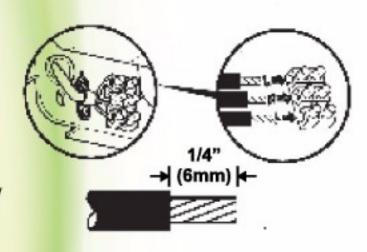
















E-C-O-N-O+ Repair Part List

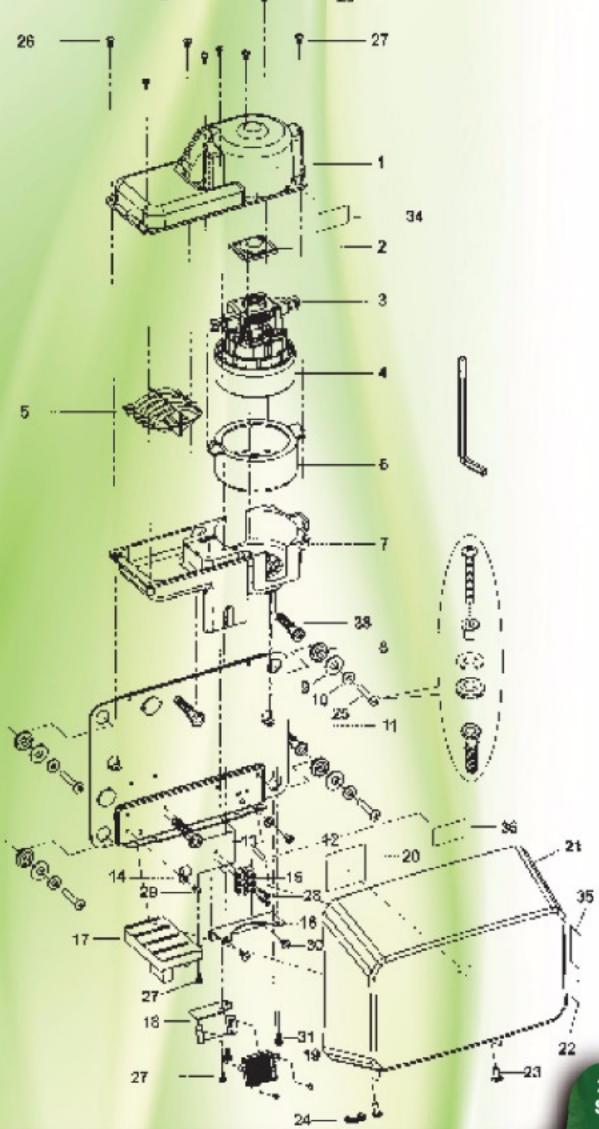

2-25 Boul Maisonneuve St-Jerome, QC J5L 0A1 Tel: +1 450-432-5946 Tel: +1 855-555-0303 info@comaccorporation.com www.comaccorporation.com

E·C·O·N·O+ **Repair Part List**

	Description	QTY	
1	Blower housing - Upper	1	
2	Motor rubber - Upper	1	
_	Motor brushes	2	
4	Motor	1	
5	Heater assembly	1	
6	Motor rubber -Lower	1	
7	Blower housing -Lower	1	
8	Rubber grommet -Base	4	
9	Metal washer	4	
10	Nylon bushing	4	
11	Base plate	1	
12	Grounding screw with cup washer	1	
13	Mylar shield with LNG marked	1	
14	Nylon cable clamp	1	
15	Terminal block	1	
16	Blower mounting bracket	1	
17	Circuit Board Module (CBM)	1	
18	Sensor bracket	1	
19	Sensor module	1	
20	20 Label, Circuit Diagram		
21	Cover	1	
22	CAUTION label	1	
23	Security hex cap head 1/4"-20 x 5/8" screw with lock washer		
24	4 Cable protector		
25	5 Self threading screw 1/4"x1-1/2", philips pan head		
26	6 Screw M4x10, philips pan head		
27	Self threading screw M4x10, phillps pan head		
28	Screw M3x16,philips pan head		
29	Screw M4x10,philips pan head with external tooth lock washer		
30	Screw M5x8, philips pan head with external tooth lock washer		
31	1 Screw M5x10,philips pan head		
32	Wires Harness (Not Shown)	1	
33	L-Wrench	1	
34	4 CBM terminal legend label		
35	85 Rating label		
36	6 Caution Branch Circuit label		
37	Crimp-on wire tips for terminal block		
38	Plastic wall anchor 5/16" DIA x 1-3/8" long (#8 x 35)	4	















E-CO-N-O+

Trouble shooting

Symptom	Corrective Action
Blower motor stops running	Turn off power to the dryer at electrical panel. Remove cover. Check all wiring connections from terminal board to the motor. Check blower wheel and spin to make sure it rotates freely: Look for objects blocking the free movement. Replace cover and turn on power to the hand dryer. If motor fails to start, have a qualified electrician check the Push-On-Switch, thermostat, motor and capacitor for proper operation. Replace if necessary.
Dryer blows cold air	Turn off power to the dryer at the electrical panel. Remove cover. Check all wiring connections to make sure all terminals are firmly mounted in place and the wire insulation is in good condition. Have a qualified electrician check the thermal cut off and heating element. Replace cover, turn on power to the hand dryer. If dryer continues to blow cold air, replace defective thermal cut off and/or heating element.
Dryer will not shut off or will not run for a complete cycle	Replace timer assembly













www.comaccorporation.com

